



# *moody cvx1*

Quick Start Guide



The full User Guide can be downloaded via the QR code



## Overview

- *moody cvx1*
  - Controls a single RGB fixture with CV dimmer output at 12 - 24V
  - Output is RGB common anode
  - Wheel controls intensity

## Operation (moody cvx1)

From factory, all scene channels are programmed to cyan. At power on, moody will automatically fade the master level to full over 5 seconds.

 
If lights are on, briefly press the control: moody fades the master level to zero over 5 seconds.

If lights are off, briefly press the control: moody fades the master level to the previously used setting over 5 seconds.

Rotate control clockwise to increase master level. Rotate control counter-clockwise to reduce master level. The LED indicator shows the master level and colour of the fixture.


To set a scene: please see programming instructions below.

## Programming (moody cvx1)

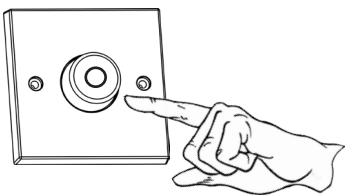


### Step 1

 To enter programming mode, press and hold control for 3 seconds.

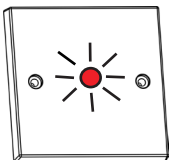


### Step 2 - programme the colour (hue)

 moody's indicator LED flashes **red** to acknowledge it has entered colour programming mode, then shows the colour of the fixture.

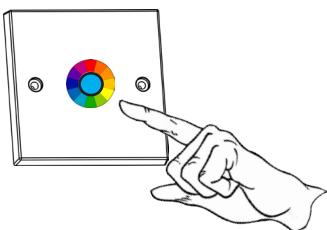


 - a)** Wait 5 seconds; moody will start slowly cycling through the colour palette. When you see the colour you want, briefly press the control.

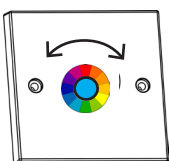


- b)** Alternatively, rotate the control clockwise or counter-clockwise to move forwards or backwards through the colour palette. When you see the colour you want, briefly press the control.

 **N.B.** During the programming process, the fixture will change colour to show the effect of your programming.

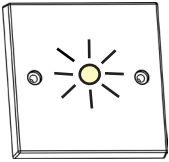


### Step 3 - programme the white level

 moody's indicator LED flashes white to acknowledge it has entered white level programming mode, then displays the white level of the fixture.

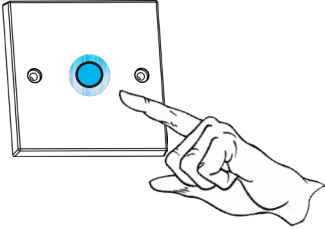


 a) Wait 5 seconds; moody will start slowly cycling through the white levels. When you see the white level you want, briefly press the control.

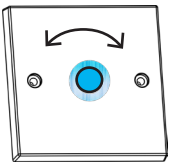


b) Alternatively, rotate the control clockwise or counter-clockwise to increase or decrease the white level. When you see the white level you want, briefly press the control.

**N.B. In moody cvx1, the white level is really saturation - it controls the amount of white that is mixed in with the colour and allows shades to be created.**

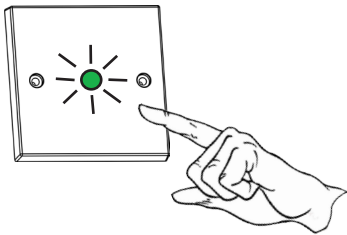 

### Step 4 - exit programming mode

 Programming of the fixture is now complete. Press and hold the control for 3 seconds to exit programming mode. moody acknowledges by flashing **green**.

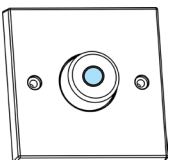

### Step 5 (end)

moody displays the master level and colour of the fixture. It is now in normal operating mode.



**Artistic Licence**

Studio 1, Spectrum House  
32-34 Gordon House Road  
London  
NW5 1LP  
United Kingdom

Telephone +44 (0) 20 8863 4515  
Fax +44 (0) 20 8426 0551  
Email: [Sales@ArtisticLicence.com](mailto:Sales@ArtisticLicence.com)  
Web: [www.ArtisticLicence.com](http://www.ArtisticLicence.com)

Customer support and knowledge base:  
[www.ArtisticLicence.com/support.html](http://www.ArtisticLicence.com/support.html)

Due to our policy of continuing product improvement  
specifications are subject to change without notice